

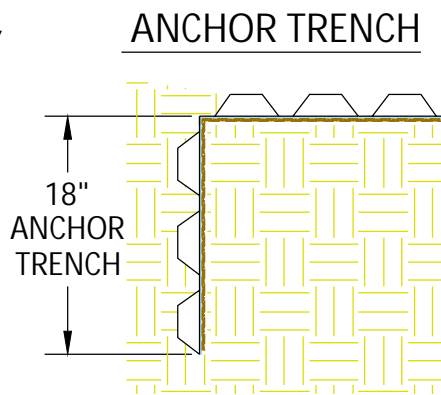
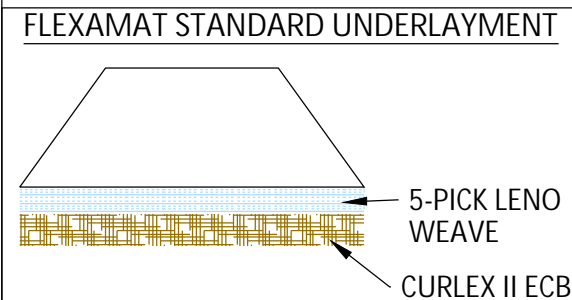



ISOMETRIC VIEW OF SLOPE AND ANCHOR TRENCHES

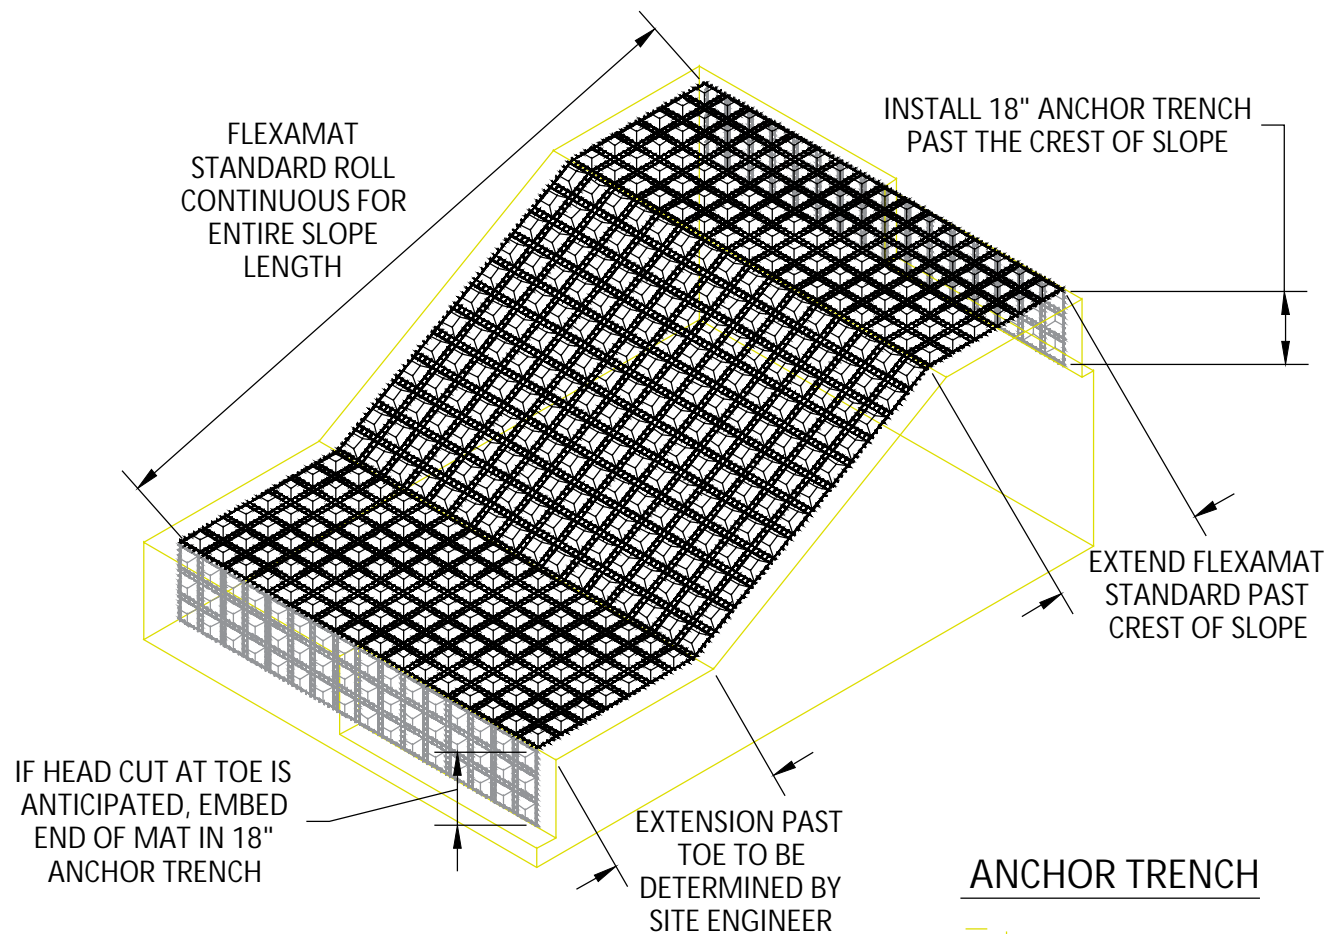

ABUTMENT METHOD FOR SEAMS WITH EXTENSIONS

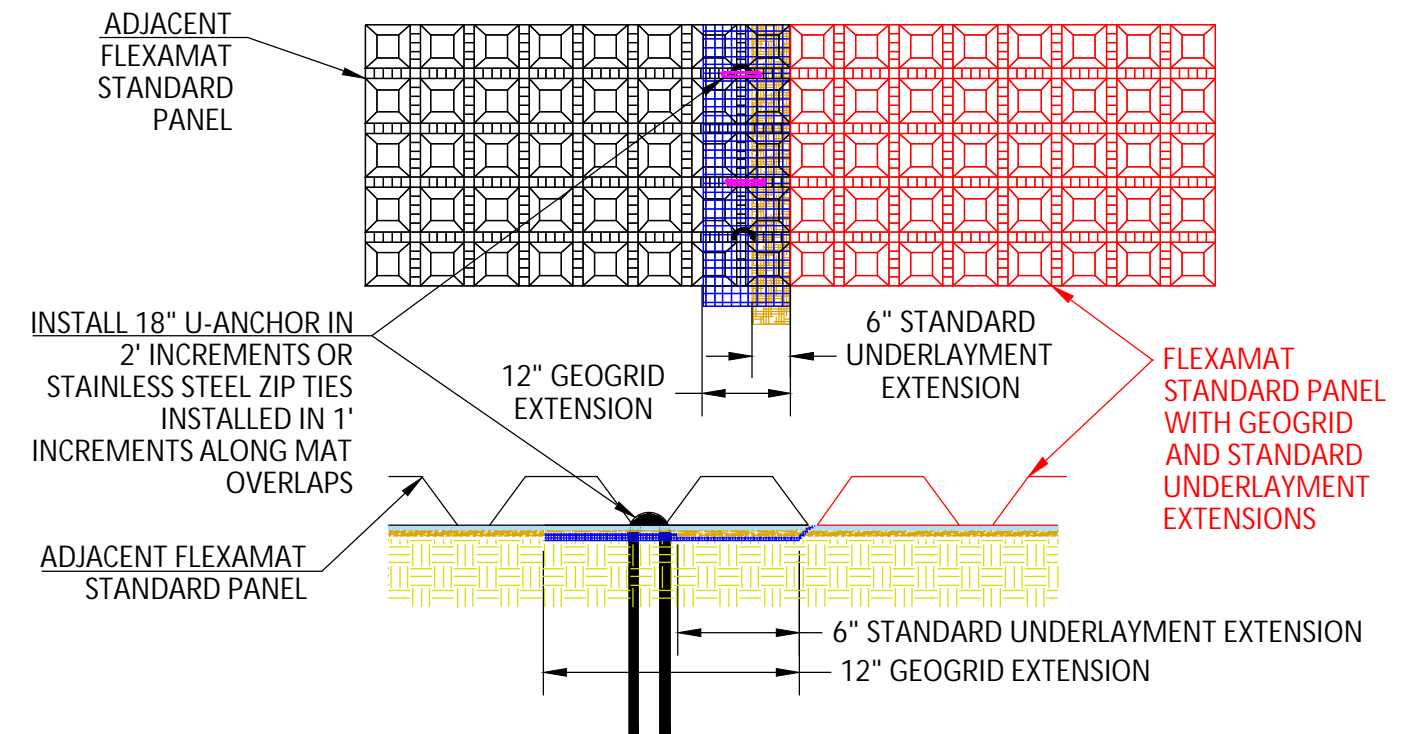

ABUTMENT METHOD FOR SEAMS WITHOUT EXTENSIONS

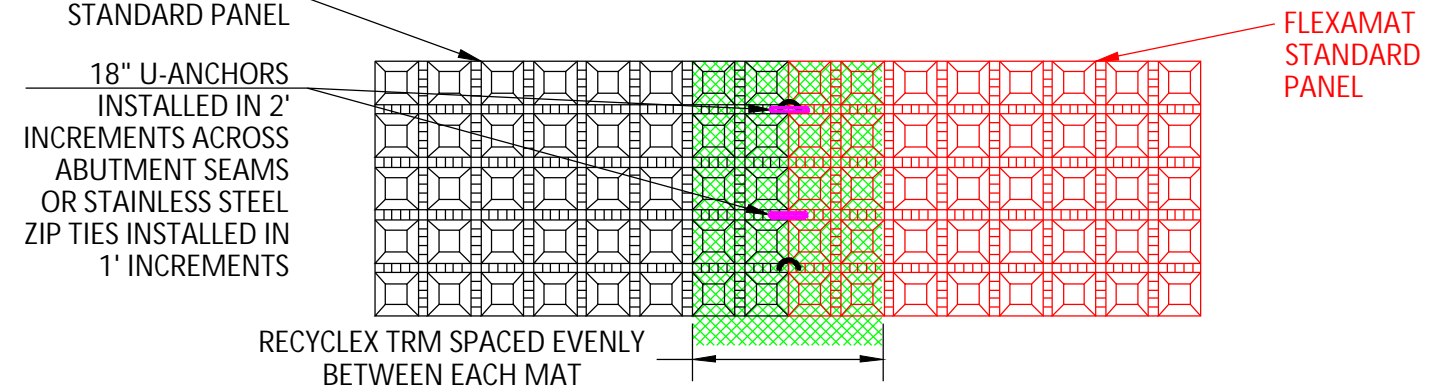

FLEXAMAT STANDARD - SLOPE ARMORING

CONSTRUCTION NOTES:

1. AN ENGINEER OR MANUFACTURERS REPRESENTATIVE SHALL BE ONSITE FOR THE START OF THE INSTALLATION.
2. ALL SUBGRADE SURFACES PREPARED FOR PLACEMENT OF MATS SHALL BE SMOOTH AND FREE OF ALL ROCKS, STICKS, ROOTS, OTHER PROTRUSIONS, OR DEBRIS OF ANY KIND.
3. PRIOR TO FLEXAMAT STANDARD INSTALLATION SEED AND FERTILIZE SUBGRADE WITH SITE SPECIFIC SEED MIX IN ACCORDANCE WITH THE PROJECT PLANS AND SPECIFICATIONS.
4. INSTALL FLEXAMAT STANDARD ROLLS THAT ARE CONTINUOUS FOR ENTIRE SLOPE LENGTH. FOR SLOPES LONGER THAN 16', USE MATS WITH EXTENSIONS CUT TO THE LENGTH OF THE SLOPE. INSTALL MATS TO THAT THE MATTING EXTENDS PAST THE CREST OF SLOPE AND INTO AN 18" ANCHOR TRENCH.
 - 4.1. FOR ARMORED SLOPE LENGTHS 16' OR LESS, INSTALL A TRM SEAM EQUALLY UNDER ADJACENT MATS.
 - 4.2. ARMORED SLOPE LENGTHS LONGER THAN 16', INSTALL NEXT MAT OVER EXTENSIONS.
5. INSTALL SUBSEQUENT MATS OVER THE GEOGRID EXTENSION AND STANDARD UNDERLAYMENT EXTENSION OF THE PREVIOUSLY INSTALLED MAT. ENSURE THE GEOGRID AND STANDARD UNDERLAYMENT EXTENSIONS ARE LAYING FLAT ON THE SUBGRADE BEFORE INSTALLING ADJACENT MAT OVER THE EXTENSIONS.
6. INSTALL #3 REBAR 18" U-ANCHORS IN 2' INCREMENTS ACROSS THE GEOGRID AND STANDARD EXTENSION ABUTMENT. INSTALL ANCHORS PERPENDICULAR TO THE SLOPE DIRECTLY BEHIND FIRST ROW OF BLOCKS ON THE ADJACENT MAT.
7. AT THE END OF THE ARMORED SLOPE, IF HEAD CUT IS ANTICIPATED, EMBED THE MAT 18" IN A TERMINATION TRENCH. FILL AND COMPACT TERMINATION TRENCH WITH SUITABLE FILL.

MOTZ ENTERPRISES, INC.

Flexamat

(513)772-6689

Info@Flexamat.com

Flexamat.com

